

Operating additional equipment by using a rele

Junior Power Timer (JPT) connectors B, C and D of the ERGO-DigiStick joystick's steering cable can be used for operating external electrical components like selector valves in a front loader. These coils normally need higher current than one channel of ERGO-DigiStick can supply (2A). Therefor a rele is needed. Notice that the signal to the terminals 85 and 86 is taken from the JPT connector. Using external souces , plus or minus, will destroy the PCB card of the joystick.

