


## Parts and their location in a BC60/8 LS steering valve

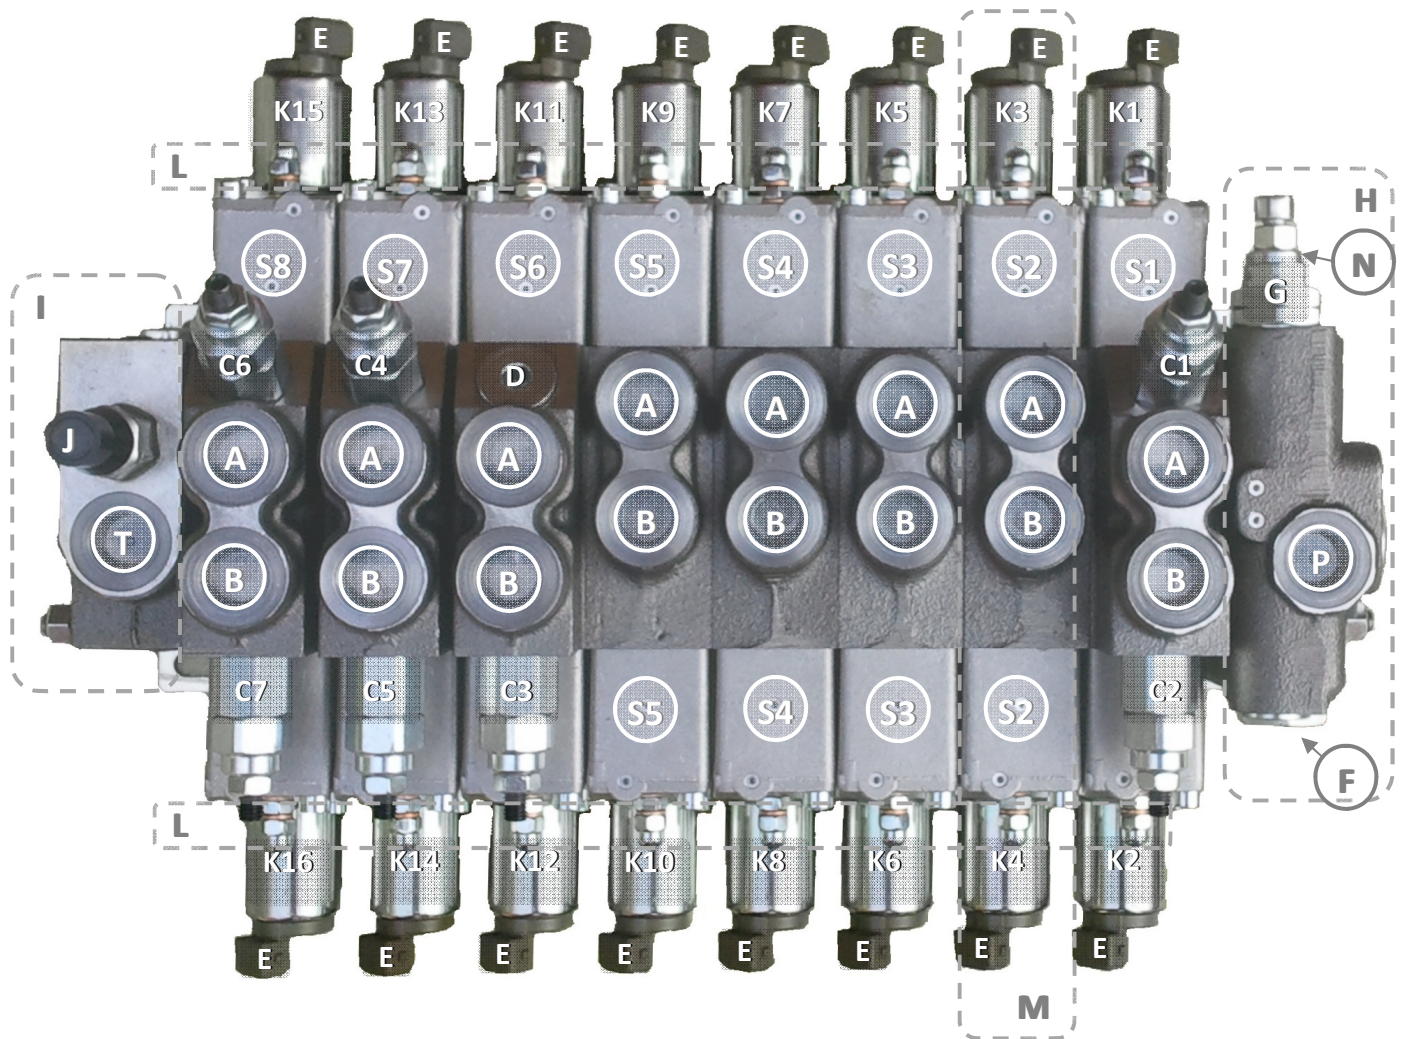

- |   |   |   |                                      |
|---|---|---|--------------------------------------|
| A | A-port  | J | Protection valve                     |
| B | B-port  | K | Thomas solenoid (K1-K16)             |
| C | Port relief (C1-C7)   | L | Limiting screw for spool movement    |
| D | Plug instead of port relief                                 | M | Section (in this case: section nr 2) |
| E | Thomas solenoid with connector<br>type : Junion Power Timer | N | Adjusting screw for servo pressure   |
| F | Connection of the LS hose                                   | S | Spring cup / section numbers         |
| G | Servo cartridge   | P | Pump line                            |
| H | Pressure inlet  | T | Tank line                            |
| I | Tank inlet  |   |                                      |



**ROTEC**  
engineering